

Install the Battery
Remove the screw in the battery cover using a small Phillips head screwdriver. Insert the CR2016 button cell battery with the positive (+) side showing. Replace the cover and the screw.

Install the Lanyard (Optional)
If desired, install the lanyard as shown in the diagram before replacing the battery cover.

Care & Cleaning
Wipe Klip! clean using a soft, non-abrasive, damp cloth. Do not submerge Klip! in water.

Klip! Kitchen Timer
Klip! Kids Teaching & Time-Out Timer

Instructions for Use

Tap (press and release) the ▷||| key to start and pause the timer. Access the (RESET) function by pressing and holding this key for 2 seconds.

Tap (press and release) the + and = keys to increment or decrement timer values. Press and hold either key to scroll values rapidly.

Using Klip!'s Timer Functions
If Klip! is currently displaying the time, press any key to access timer mode.

(RESET) To begin, reset Klip! to 00:00:00 by pressing and holding ▷||| for 2 seconds. The function of the timer depends on the next key:

⏸ TIMER ▲ To use the stopwatch press ▷||| immediately to begin timing. Press ▷||| again to pause. At any time, press and hold ▷||| for 2 secs to reset the timer to zero. NOTE: The +/- keys have no effect in stopwatch mode.

⏸ TIMER ▼ To use the countdown timer first confirm that you have reset the Klip! to 00:00:00. Input the desired timer duration (30 sec – 24 hours) using the +/- keys. *The bar graphic appears.* Press ▷||| to begin counting down. Press ▷||| again to pause the countdown. While paused, the duration may be adjusted using +/- (the bar graphic will reset if adjusted mid-countdown). Silence a sounding timer by pressing any key. *The last value entered is recalled automatically.*

Clock Mode
To enter clock mode, hold down the ▷||| and + keys together for 2 seconds. Press any key to return to timer mode.

NOTE: If clock mode is accessed while the timer is running, the time is displayed for 7 seconds and then returns to timer mode automatically. Timing is not disrupted.

Keypad Lock
To lock the keypad (keys are disabled), press and hold the ▷||| and – keys together for 2 seconds. Press and hold these keys again to unlock the keypad. If the keypad is locked while the countdown timer is running, it unlocks automatically when the timer sounds.

Contacting American Innovative
If you have questions about your product, please visit us on the world wide web at: <http://www.americaninnovative.com/contact/>

To Set the Time

- 1) Press and hold SET (back of timer) for 2 seconds using a paperclip. *12 Hr flashes.*
- 2) Choose the clock mode (12- or 24-hour) using the +/- keys. Tap (press and release) ▷||| to continue.
- 3) Use +/- to input the hour. Tap ▷||| to continue.
- 4) Use +/- to input the minute. Tap ▷||| to exit setup.