

- 1 For Loricron clocks with pendulum, release pendulum hanger on back of movement by gently pushing sideways.
2. Remove protective film, and hook pendulum onto pendulum hanger
3. Insert two (2) new alkaline batteries into the movement according to +/- symbols
The clock may begin to chime - this is normal.
4. Hang wall clock vertically - Place table clock horizontally
- 5 **Setting The Time Of Day:**

Set time by turning minute hand or Time Set Knob
Your Loricron clock will not chime on the quarter hour whenever the hands are moved manually
** The clock may count one extra hour upon time setting.
The correct hour count will begin on the next full hour.

6 **Chime Selector Switch:**

- O = Off - no chime or strike
- W = Westminster chime
- B = Bell strike on the hour and half hour

7 **Westminster Chime Selection Switch:**
(Functions only when Chime Selector Switch is set to "W")

- ☉ = Westminster chime every quarter hour + hour count
- = Westminster chime on the hour only + hour count

8 **Chime Night Silence Feature = ☾**

Move switch to the "crossed out moon" position one hour before the desired shut-off period. Starting on the following full hour, your Loricron clock will be silent for the next eight (8) hours. This feature will repeat every day at the same time until canceled.

To cancel chime shut-off feature, move switch to "sun" symbol

EXAMPLE: To set the chime volume shut-off for the eight hour period of 11:00 p.m. to 7:00 a.m., move the switch to the "crossed out moon" position sometime between 10:00 p.m. and 11:00 p.m. Your Loricron clock will be silent starting at 11:00 every night and resume chiming at 7:00 every morning

9 **Chime Volume Reduction Feature = ☾**

Same as above except chime volume will be reduced by 1/2.

10 **Volume Control:**

By turning the knob, the chime volume level can be increased or decreased

11. **Adjustments:**

- a) If your Loricron clock strikes before or after the twelve (top of the hour) adjust as follows:

Move minute hand until clock strikes, then while holding time set knob stationary, move minute hand to twelve o'clock position.

- b) If your Loricron clock does not chime, check the following:

Batteries are fresh and installed correctly
Check that volume control knob is not set too low
Check that chime selector switch is not set to "Off"
Check that night silence switch is not set to ☾

12 **Battery Replacement:**

After approximately 10 months, or when your Loricron clock loses time, pendulum stops, or chimes sound continuously or off key, the batteries should be replaced

** Before returning your Loricron clock for service, try fresh alkaline batteries.

** When batteries are first inserted, or after the time is set, the clock may count one extra hour e.g. 13 times at 12:00. Allow one full hour for the clock to adjust itself.

