



OPERATING INSTRUCTIONS

FOR QUARTZ ANNIVERSARY CLOCK

Remove battery cover (A). Place alkaline size AA battery plus (+) down in battery compartment (B). Use time adjustment knob (C) to set correct time. Replace battery in approximately twelve months.

FOR CLOCKS WITH MELODY

Turn button (D) to adjust volume of melody.

FOR CLOCKS WITH WESTMINSTER MELODY

Special adjustments not required. Westminster chime will sound on the hour.

FOR CLOCKS WITH WESTMINSTER/AVE-MARIA MELODY

Special adjustments not required. Chime will sound on the hour.

Chime selection can be changed as follows (E):

- *No. 1* Non Striking
- *No. 2* Westminster Melody
- *No. 3* Ave-Maria Melody

FOR CLOCKS WITH AUTO DIM

Special adjustment not required. Auto Dim prevents the clock from chiming in the dark. Chime will sound on the hour. Chime selection can be changed as follows (E):

- *No. 1* Non Striking
- *No. 2* Westminster Melody
- *No. 3* Ave-Maria Melody

FOR CLOCKS WITH MOON PHASE

Special adjustment is required: Using the time adjustment knob (C) set time to 6:30. Manually rotate the moon disc in clockwise direction (To The Right) to desired position. Do Not Rotate The Moon Disc Counter Clockwise (To The Left). Using the time adjustments knob (C) set correct time.

Instructions for anniversary quartz clocks (W 85)

Place the battery in the aperture (A) in the directions shown in the illustration on the movement housing. Make certain the battery is securely pushed home. Any battery type AA 1.5V can be used but alkaline manganese cells are preferable to give longer running time.

Set the hands to the correct time by turning the knurled knob (C) which protrudes through the movement housing.

Your anniversary clock will run for approximately 15 months on a fresh alkaline/manganese cell. When the battery is nearly exhausted the timekeeping may be affected or even stop, through the pendulum unit may continue to turn. If this should happen, please replace the battery. It is advisable to retain the exterior packing in cases it is necessary to eventually return your clock for service.

For Clocks With Moon Phase: Special adjustments is required. Using the time adjustment knob (C) set time to 6:30. Manually rotate the moon disc in clockwise direction (To the Right) to desired position. Do Not Rotate The Moon Disc Counter Clockwise (To The Left). Using the time adjustments knob (C) set correct time.

Clocks with Melody: The clock with melody sounds only every full hour. By rotary regulating switch in the base of the clock, the melody can be stopped.