


Gebrauchsanweisung
Quartz-Jahresuhr (W 97)

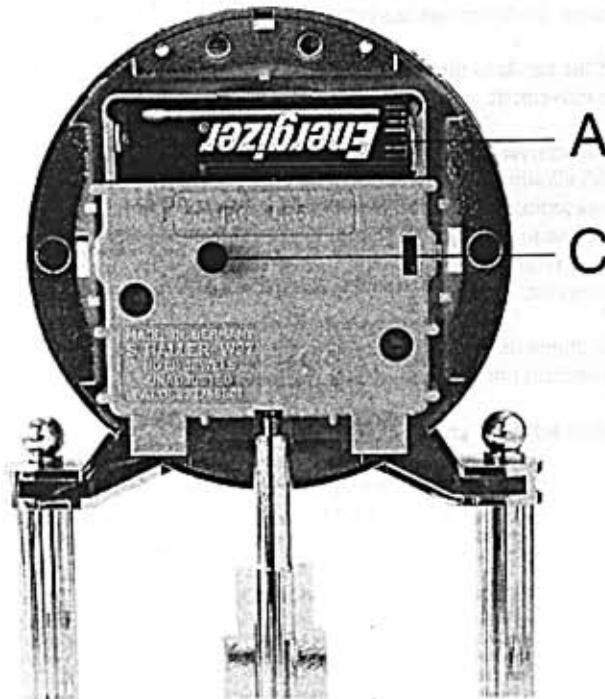

Instructions for Anniversary Quartz Clocks (W 97)

Place the AA 1, 5 V alkaline battery in the opening (A) in the direction shown. Make certain the battery is secure.

Set the hands to the correct time by turning the knob (C) on the back of the movement.

Your anniversary clock will run for approximately 15 months on a fresh alkaline battery. When the battery is nearly exhausted, the timekeeping may be affected or even stop, though the pendulum may continue to turn. If this should happen, please replace the battery. Please retain the original box in case it is necessary to return the clock for service.

The chime unit is located underneath the clock base. Special adjustment not required. Chime will sound on the hour.

Chime selection can be changed as follows:

- No. 1 – Off
- No. 2 – Westminster Melody
- No. 3 – Ava-Maria Melody