

ANNIVERSARY 8-DAY WIND SHIP'S BELL CLOCK

Operating Instructions

To operate clock please observe the following steps:

- (1) Remove plastic tube inserted in wind hole located on the face of the clock. Tube is inserted to keep minute hand from rotating in transit.
- (2) Clock will only strike when in vertical position.
- (3) Bell switch is located on left hand position of face between 10 and 11 o'clock. "Fast/slow" switch is located on right hand side of face between 12 and 1 o'clock. Simply slide switches to the left or right for desired bell and time adjustments. Clock will run if bells are turned on or off.
- (4) To set time, rotate the minute hand clockwise only to the desired time. Care should be taken to not touch hour hand.
- (5) Wind the bell spring and main spring clockwise only. Do not exert force, as over-winding will damage the mechanism.* Clock should be wound every 7 days, preferably at the same time of day.

Weems & Plath[®]

214 EASTERN AVE. • ANNAPOLIS, MD 21403 • USA
410-263-6700 • fax 410-268-8713 • www.weems-plath.com

E-mail: support@weems-plath.com

9/03